


# installation on walls

**tretford** can be installed as an acoustic wall covering on any clean, dry, smooth surface such as concrete, dry wall, plaster, particle board, metal, plastic, laminate or ply wood (minimum thickness 12mm or 1/2"). Do not install over wallpaper or vinyl wall coverings. Avoid locating horizontal seams at eye level. When installing **tretford** on walls, we recommend the high tack adhesive Parabond 4099.

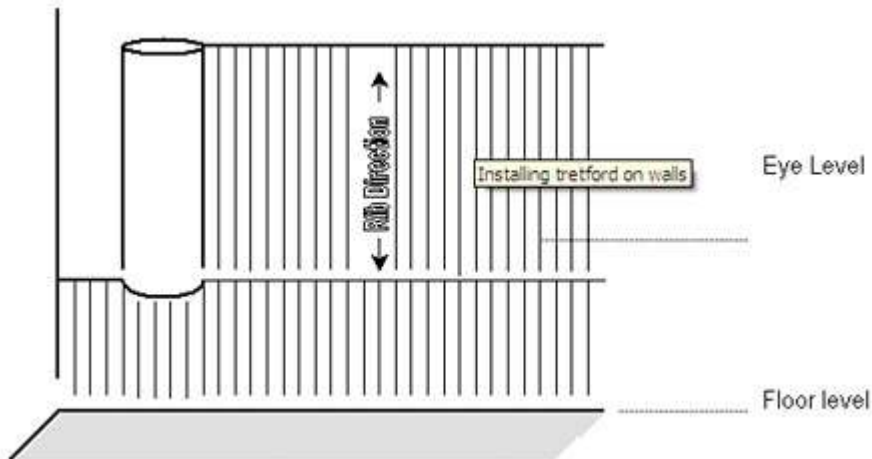

When installing **tretford** on walls with ribs running vertically, run full roll along ceiling line to keep seam below eye level. Reference wall installation lists are available on request.